



TM/MC/MR

## ILLUSTRATED PARTS LIST

### SINGLE HANDLE TOUCHLESS KITCHEN FAUCET


MODEL	ITEM	FINISH
E1213000BN	962862	BRUSHED NICKEL

#### How to order replacement parts:

To order replacement parts call our toll free customer service line at **1-866-789-2273** or your local costco representative.



#### PARTS DIAGRAM

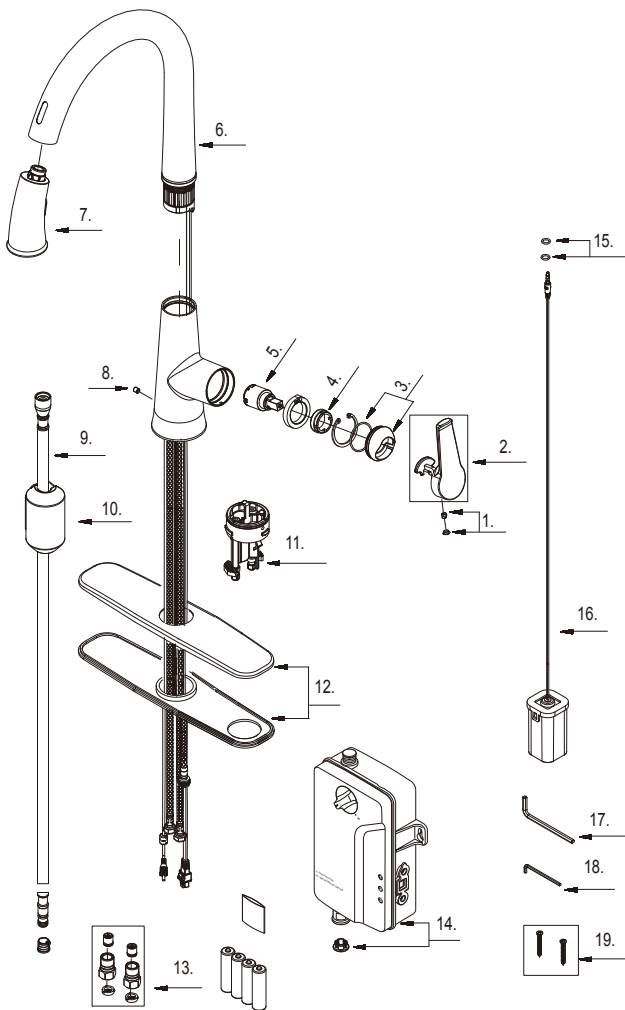

No.	Part Name	Part No.
1	Index Button - Cold/Hot	A66D558
2	Metal Handle Assembly	A662522
3	Trim Cap Assembly	A663977
4	Locking Nut	A104077
5	Ceramic Disc Cartridge	A507169N
6	Spout Tube Assembly	A542003
7	Hand Spray Assembly	A528024N-54
8	Screw (M5 * 5 mm L)	A008003
9	Hose	A515111W
10	Weight	A504103ZN
11	Shank Assembly	A504076
12	Cover Plate and Putty Plate	A667003-T
13	Filter Check Valves Adapter Assembly	A613263W
14	Control Box	A663911N
15	O-Ring set	A668178N
16	Battery Box	A543113
17	Hex Wrench	
18	Hex wrench (H 4 * 20 mm L * 70 mm L)	A031011NI
19	Hex wrench (H 2.5mm * 11 mm L * 53 mmL)	A031217NI
	Screw	A668088ZA