

A700116-GBG1 Fill Valve Adjustment:



How to lock/Unlock Fill Valve (Figure 1)



How to adjust tank water level (Figure 2)

How to Lower or raise the water level setting of the fill valve?

- **To rise the floating cup (or water level inside the tank):**
First flush the tank. While tank is flushing, (use your fingers or a screwdriver), turn the head of the screw rod clockwise to raise the floating cup which rises the level setting (Figure 2)
- **To lower the floating cup (or water level inside the tank):**
First flush the tank. While tank is flushing begin turning the screw adjustment rod counter-clockwise several times (Figure 2). The Flush Valve will shut off at the new setting.

If you want to shorten the fill valve:

- Release the locking Ring by pushing it up (Figure 1).
- Twist shank into valve body to shorten the total length of fill valve.

If you want to make it longer:

- Release the locking Ring by pushing it up (Figure 1).
- Twist shank away from valve body.