

A700533-GBG1 Fill Valve Adjustment:



How to lock/unlock Fill Valve (Figure 1)



How to adjust tank water level (Figure 2)



How to Lower or raise the water level setting of the fill valve?

- **To rise the floating cup (or water level inside the tank):**

First flush the tank. While tank is flushing, (use your fingers or a screwdriver), turn the head of the screw rod clockwise to raise the floating cup which rises the level setting (Figure 2)

- **To lower the floating cup (or water level inside the tank):**

First flush the tank. While tank is flushing begin turning the screw adjustment rod counter-clockwise several times (Figure 2). The Flush Valve will shut off at the new setting.

If you want to shorten the fill valve:

1. Release the locking Ring by pushing it up (Figure 1).
2. Twist shank into valve body to shorten the total length of fill valve.

If you want to make it longer:

- Release the locking Ring by pushing it up (Figure 1).
- Twist shank away from valve body.