


A700133-GBG1 Fill Valve Adjustment:

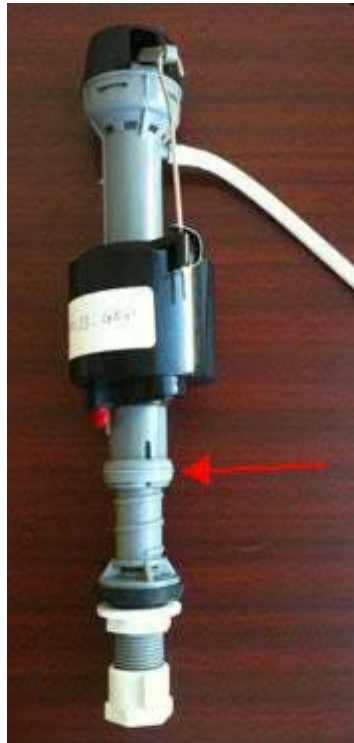

How to lock/Unlock Fill Valve (Figure 1)



How to adjust tank water level (Figure 2)

How to Lower or raise the water level setting of the fill valve?

- Pull down the red plastic locking nut (Figure 3).



Pull down red lock nut (Figure 3)



Squeeze the metal clip (Figure 4)

- **To rise the floating cup (or water level inside the tank):**

First flush the tank. While tank is flushing, squeeze the water level adjustment clip and slide the clip along with the float cup, up along the steel link (Figure 4).

- **To lower the floating cup (or water level inside the tank):**

First flush the tank. While tank is flushing, squeeze the water level adjustment clip and slide the clip along with the float cup, down along the steel link to lower the water level in the tank (Figure 4).

If you want to shorten the fill valve:

- Release the locking Ring by pushing it up (Figure 1).
- Twist shank into valve body to shorten the total length of fill valve.

If you want to make it longer:

- Release the locking Ring by pushing it up (Figure 1).
- Twist shank away from valve body.