


A700176-GBG1 Fill Valve Adjustment:

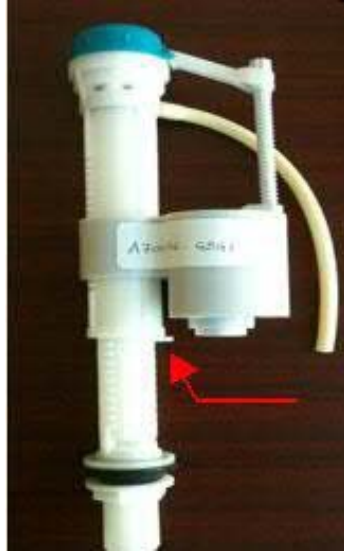

How to lock/Unlock Fill Valve (Figure 1)



How to adjust tank water level (Figure 2)

How to Lower or raise the water level setting of the fill valve?

- To rise the floating cup (or water level inside the tank):



How to raise water level or lower it inside the tank (Figure 3)

First flush the tank. While tank is flushing, (use your fingers or a screwdriver), turn the head of the screw rod clockwise to raise the floating cup which rises the level setting (Figure 2, 3).

- To lower the floating cup (or water level inside the tank):

First flush the tank. While tank is flushing begin turning the screw adjustment rod counter-clockwise several times (Figure 2, 3). The Fill Valve will shut off at the new setting.

If you want to shorten the fill valve or make it longer:



Remove locking Pin by pulling it down (Figure



Turn valve body 1/8 turn counter-clockwise (Figure 5)

1. Remove the white plastic locking pin by pulling it down. (Figure 4).
2. Rotate the fill valve body (top portion) counter-clockwise about 1/8 of a turn (Figure 5).
3. Fill valve will be free to slide up or down to any the appropriate height (shorter or longer).
4. Then turn the fill valve body clockwise to lock it back in place.
5. Final step is to push the white locking pin in place to secure the fill valve.