
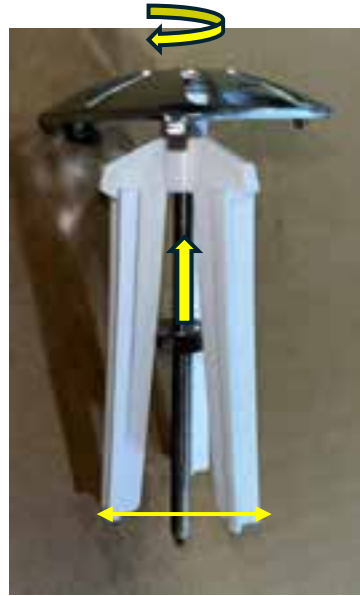


GA715018 Strainer

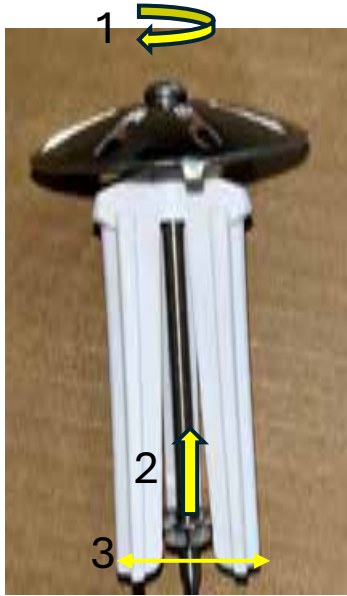

1. Tighten the bolt with a screwdriver.
2. The nut in the bolt will start to going up through the plastic rods
3. The rods are opened and will put some pressure on the urinal hole